

How to swap retrieval door hinging side:

Tools required: Pliers with a small or pointed nose. Small or medium size blade/flat screwdriver.

1. Open the front delivery door fully so the internal flap moves out of the way. Weight rear to avoid toppling.
2. Open the lower/retrieval door and look inside at the upper pivot area.
3. Use a blade screwdriver or similar tool to bend the steel tab above the top of the stainless pivot pin out of the way



4. Use pointy nose pliers to grip the pin and slide it up ~10mm. Remove the bottom then top of the door.
5. Prise up and swap the thin black plastic plug (shown below) and lower pivot bushing (1.5mm thick) positions. Push/rub the plug down firmly around the centre to bed down so it locks in position. Also pull out and transfer the rubber bumpers to the other side.



6. Rotate door 180 degrees and fit on the other side, reversing steps 4 and 3.
7. Remove lock, rotate 180 degrees and re-fit. Check operation. Flip cam plate 180 degrees if not locking in.